



## Instruction Leaflet


## UHF Clamp Plug

RS stock no. 257-2917

**Assembly instructions**

1. Place coupling nut over cable, as shown.
2. Trim from cable the outer sheath, braid and dielectric, to dimensions indicated.
3. Tin exposed braid and centre conductor.
4. Screw body sub-assembly onto the cable as far as it will go.
5. Solder braid to body sub-assembly, then centre conductor to contact.
6. Screw coupling nut forward over body sub-assembly.

Figure 1

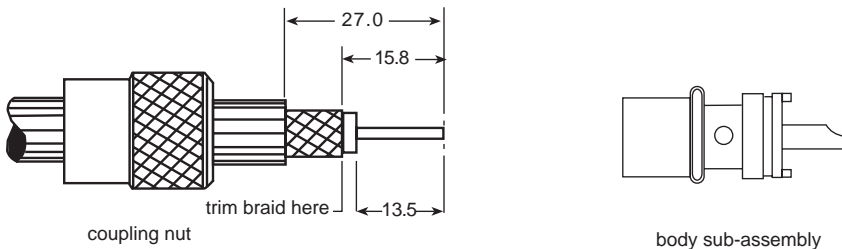

The information provided in RS technical literature is believed to be accurate and reliable; however, RS Components assumes no responsibility for inaccuracies or omissions, or for the use of this information, and all use of such information shall be entirely at the user's own risk. No responsibility is assumed by RS Components for any infringements of patents or other rights of third parties which may result from its use.

Specifications shown in RS Components technical literature are subject to change without notice.